



Roof exit switch US-3-R/US-6-R

Operating instructions



Before installation, read these instructions carefully and completely.

1 General

The roof exit switch *US-3-R/US-6-R* (3/6-position switch) is connected to the line for automatic detectors of an SHE control centre. When activated, the alarm function of the control centre is activated to open the SHV. The roof domes opened in this way can then be used as roof exits.

The alarm function can only be reset by turning the roof exit switch back to the zero position. The domes can then only be closed manually using the ventilation button or by activating the "Auto Close" function of the control centre.



**Do not change the setting of the selector switch on the connection board.
Before operating, check whether alarm forwarding needs to be deactivated and ensure
that no damage can be caused by wind/rain.**
**There is a risk of crushing and trapping when closing roof domes! Therefore, it is essential
to ensure that no persons are in the vicinity of the roof exit.**

2 Technical data

Type	US-3-R	US-6-R
Part number	8301US310001	8301US610001
Labelling		"Roof exit switch"
Integrated resistors:		1,5 kΩ 10 kΩ
Storage/operating conditions:		-5 °C ... +40 °C 20 % ... 80 %, non-condensing
Enclosure:	Plastic Grey (like RAL 7035) IP54 72 x 80 x 56	Plastic Polar white IP10 80 x 80 x 61
Details and scope of delivery	Surface-mounted key switch (incl. key), key can be removed in engaged position	Surface mounted key switch (without sectional half cylinder PHZ)


The requirements of the Directives 2014/35/EU and 2014/30/EU are met.

Suitable for operation in residential, business and commercial areas.

3 Installation


Fasten the roof exit switch *US-3-R/US-6-R* securely to a wall using suitable mounting material and connect it according to the connection diagrams.

3.1 Connection to the terminals of the signalling line (■) in an SHE control centre

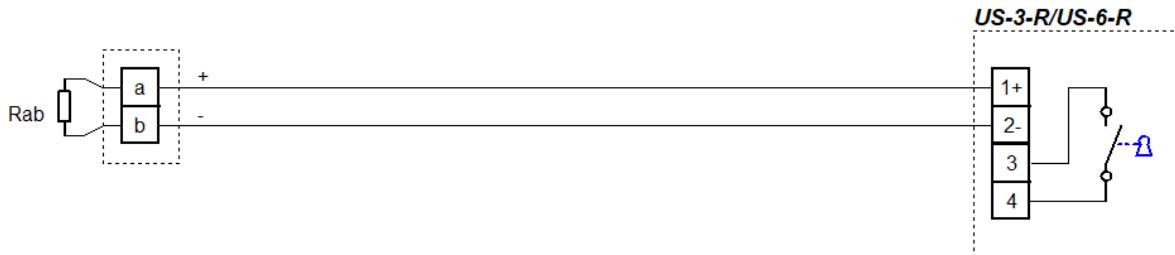

Remove the terminating resistor *Rab* when connecting the roof exit switch.


3.2 Connection to an automatic fire detector

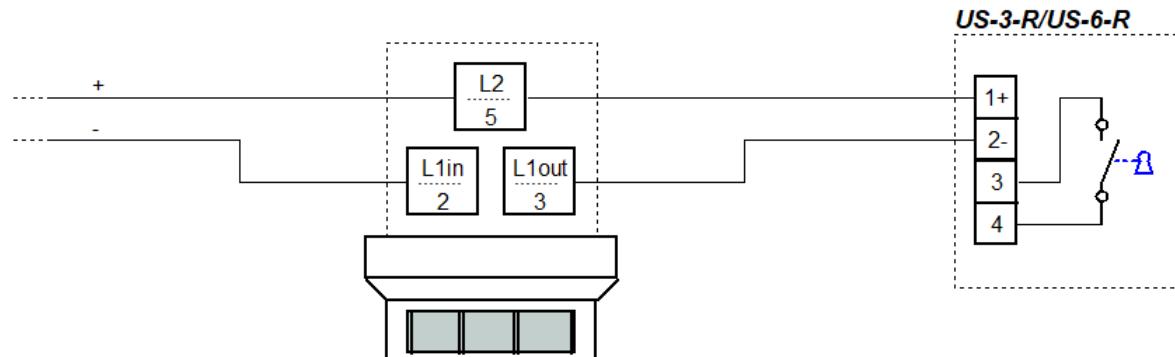

Type *RM 2/TM 2*:
Type *RM 3/TM 3*:

Terminals L1 in, L1 out and L2
Terminals 2, 3 and 5

3.3 Connection to a fire alarm control panel

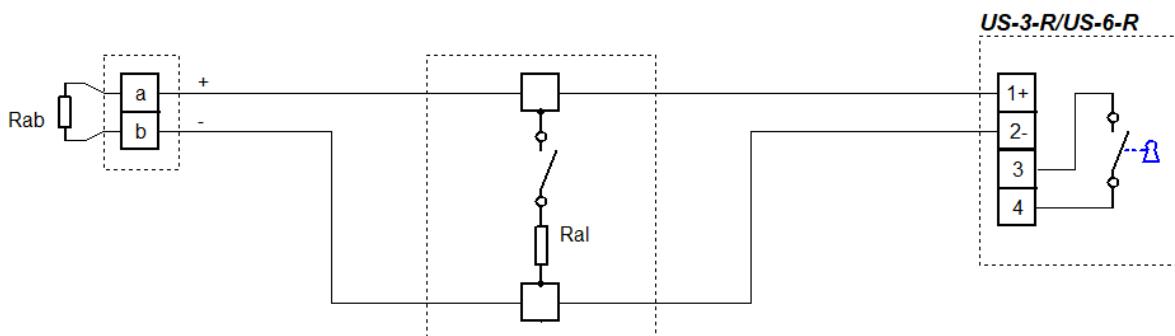

Remove the terminating resistor *Rab* when connecting the roof exit switch.